

Nokia 216


Getting Started




Keys and parts


Explore the keys and parts of your new phone.

- 1 Front camera
- 2 Charger connector
- 3 Earpiece
- 4 Headphone connector (3.5 mm)
- 5 Front-facing flash
- 6 Selection keys
- 7 End/Power key
- 8 Microphone
- 9 Call key
- 10 Scroll key
- 11 Flash light
- 12 Main camera
- 13 Antenna area
- 14 Back cover opening slot
- 15 Loudspeaker

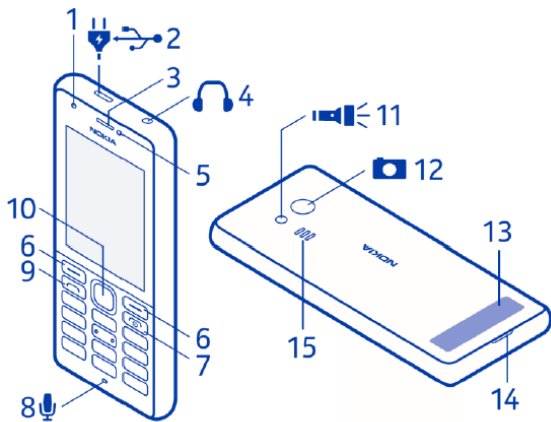

To lock the keys, quickly press , and select **Lock**.

To unlock the keys, quickly press , and select **Unlock**.

To quickly switch the rear flash light , in the idle screen, press the scroll key up twice. To switch the light off, press the scroll key up once more. Do not shine the light in anyone's eyes.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

Note: You can set the phone to ask for a security code. The pre-set code is 12345. Change it to protect your privacy and personal data. Note, however, that when you change the code, you to remember the new code.