


Nokia 150 - Getting Started

Get to grips with the basics, and have your phone up and running in no time.

Keys and parts

Explore the keys and parts of your new phone.

- 1 Charger connector
- 2 Earpiece
- 3 Headphone connector (3.5 mm)
- 4 Selection keys
- 5 End/Power key
- 6 Microphone
- 7 Call key
- 8 Scroll key
- 9 Flash light
- 10 Camera
- 11 Antenna area
- 12 Back cover opening slot
- 13 Loudspeaker

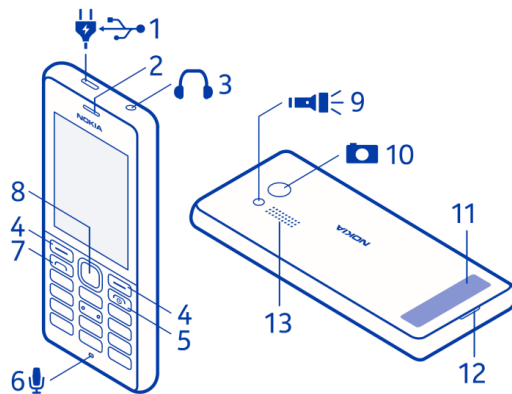

Lock and unlock the keys when not using your phone.

To lock the keys, quickly press  and select Lock.

To unlock the keys, quickly press  and select Unlock.

Flash Light

To quickly switch the rear flash light on, in the idle screen, press the scroll key up twice. To switch the light off, press the scroll key up once more. Do not shine the light in anyone's eyes.