

Doro 6520 – Insert Sim



1. Remove the battery cover. Be careful not to damage your fingernails when you remove the cover. Do not bend or twist the cover excessively as it may be damaged. Remove the battery if it is already installed.
2. Optional: Locate the SD card holder and gently slide the card in the holder. The device works with or without a SD card installed.
Compatible card type: microSD, microSDHC.
3. Locate the SIM card holder and gently slide the card in the holder. See the label right next to the holder for guidance on how to insert the card. This device accepts micro SIM or 3FF SIM card. If you have problem to remove/replace the SIM card, use adhesive tape on the exposed part of the SIM card to pull it out.
4. Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right. Replace the battery cover.