



Sony Xperia XZ Premium – Getting Started

To turn on the device

It is important to use the USB Type-C™ cable (provided) when charging your device, as other types of USB cables can damage your device. It is recommended to charge the battery for at least 30 minutes before you turn on the device for the first time.

1. Press and hold down the power key until the device vibrates.
2. Enter your SIM card PIN when requested, then tap
3. Wait a moment for the device to start.

To turn off the device

1. Press and hold down the power key until the options menu opens.
2. In the options menu, tap Power off.

Home Screen



The Home screen is the starting point for using your device. It's similar to the desktop on a computer screen. Your Home screen can have up to twenty panes, which extend beyond the regular screen display width. The number of Home screen panes is represented by a series of dots at the lower part of the Home screen. The highlighted dot shows the pane that is currently displayed.

Welcome to Xperia™ widget — Tap to open the widget and select a task such as copying content from your old device or setting up Xperia™ services

Dots — Represents the number of Home screen panes

To go to the Home Screen press 

