



Sony Xperia L1 – Getting Started

To turn on the device

1. Press and hold down the power key until the device vibrates.
2. Enter your SIM card PIN when requested, then tap tick.
3. Wait a moment for the device to start.

To turn off the device

1. Press and hold down the power key until the options menu opens.
2. In the options menu, tap Power off.

Home Screen

The Home screen is the starting point for using your device. It's similar to the desktop on a computer screen. Your Home screen can have up to twenty panes, which extend beyond the regular screen display width. The number of Home screen panes is represented by a series of dots at the lower part of the Home screen. The highlighted dot shows the pane that is currently displayed.



1. Welcome to Xperia™ widget — Tap to open the widget and select a task such as copying content from your old device or setting up Xperia™ services
2. Dots — Represents the number of Home screen panes

To go to the Home screen

Press 

To browse the Home screen -

