


# Alcatel Pixi 4 4 inch - Getting Started

## Keys and connectors

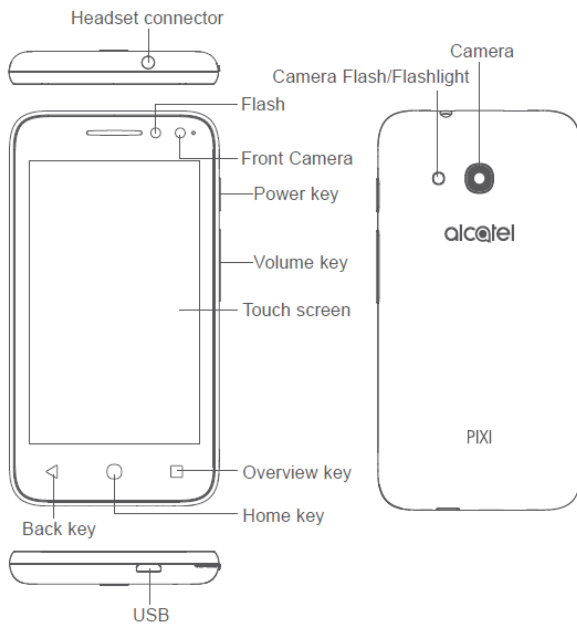

### Overview key

- Touch to switch between individual app activities and documents.



### Home key

- From any application or screen, touch to return to the Home screen.
- Long press to turn on Google Now.



### Back key

- Touch to go back to the previous screen, or close a dialog box, options menu, the notification panel, etc.



### Power key

- Press: Lock the screen/Light up the screen.
- Press and hold: Show the popup menu to select from **Restart**, **Power off**, and **Aeroplane mode**.
- Press and hold the **Power** key for at least 10 seconds to force reboot.
- Press and hold the **Power** key and **Volume up** key under power off mode to enter recovery mode.
- Press and hold the **Power** key and **Volume down** key to make a screenshot.



### Volume Keys

- During a call, adjusts the earpiece or headset volume.
- In Music/Video/Streaming mode, adjusts the media volume.
- In general mode, adjusts the ringtone volume.
- Mutes the ringtone of an incoming call.