


Nokia 5.1 - Getting Started

1. Fingerprint sensor
2. Flash
3. Main camera
4. Headset connector
5. Microphone
6. SIM cards
7. Memory card
8. Front camera
9. Proximity sensor/
Ambient light
sensor
10. Earpiece
11. Volume keys
12. Power/Lock key
13. USB connector
14. Microphone
15. Loudspeaker

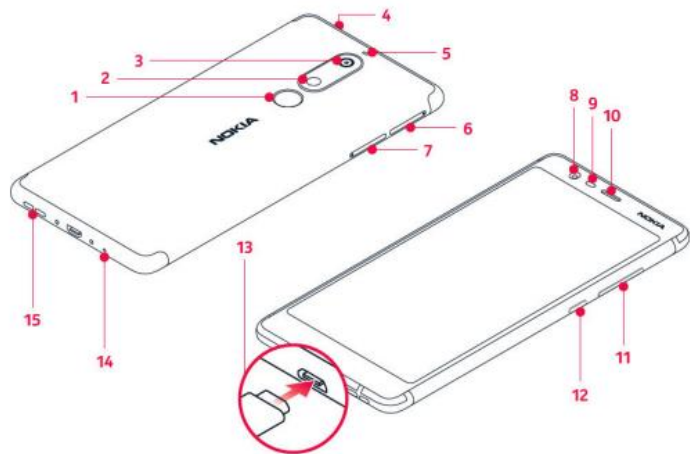

Lock your phone

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press the power key.

Unlock the keys and screen

Press the power key, and swipe up across the screen. If asked, provide additional credentials.