


HTC One A9


How to Insert Sim



1. Hold the phone face up.
2. Insert the tip of the tray eject tool (or a small bent paperclip) into the tray eject hole next to the nano SIM card slot.

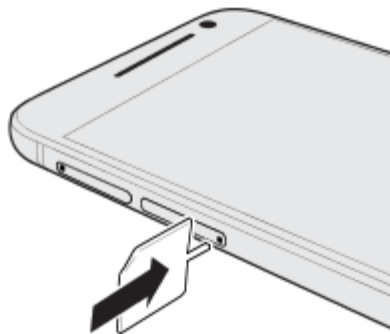

3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.
4. Place the nano SIM card into the tray, with the gold contacts facing up and cut-off corner facing up.

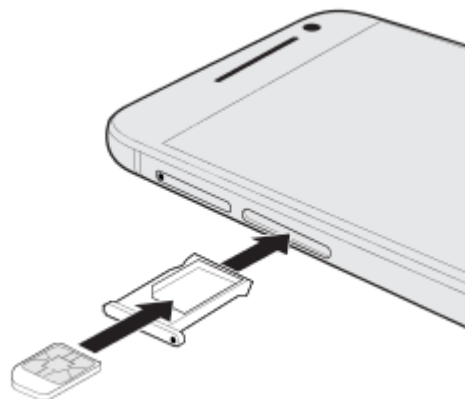

5. Insert the card tray back into the slot.