


HTC One M8S


How to Insert Sim



1. Hold the phone face up.
2. Insert the tip of the tray eject tool (or a small bent paperclip) into the tray eject hole next to the nano SIM card slot.

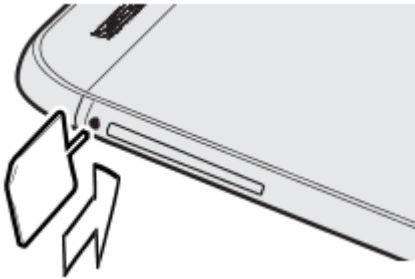

3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.
4. Remove the placeholder card from the tray, if there's one pre-inserted.
5. Place the nano SIM card (contacts facing down) into the tray.

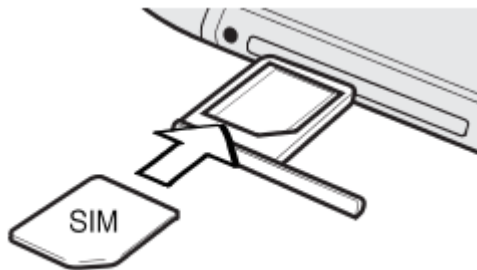

6. Insert the card tray back into the slot.