



## Moto C – Insert Sim Card

The following steps contain instructions on how to insert one or more SIM cards in your Motorola Moto C.



1. Remove the back cover of the Motorola Moto C.
2. Insert the SIM into the SIM slot.
3. Insert the battery.
4. Replace the back cover.



## Put in the cards

Your phone might support using two SIM cards. To insert your SIM card(s) or an optional microSD memory card, follow these instructions.

Caution: make sure you use the correct size SIM cards and don't cut the SIM cards. Don't use tools to remove the battery – doing so may damage your phone.

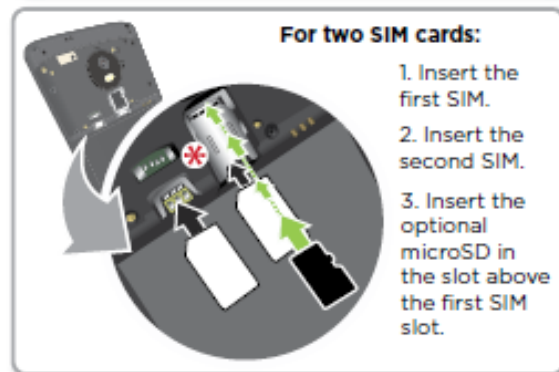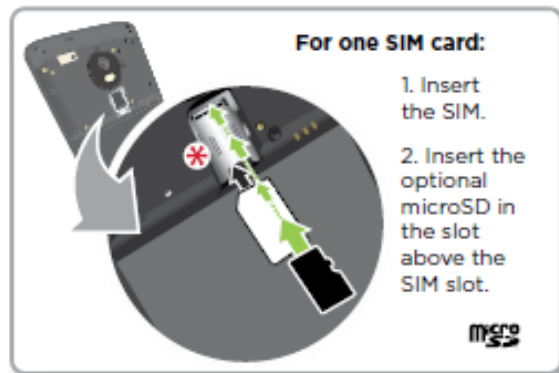

**\* Note:** To remove SIM1, slide the lever on the slot.

Put on the cover & power on

Put on the back cover. Charge your phone fully and turn the power on. Then select your language and follow the screen prompts to get started.

